




## Resistor Installation guide

Part # 50RESIST\*\*\*\* (\*\*\*\*Bulb number)



When the use of resistor is needed :

1. Plug the resistor on the OEM side bulb connector on each sides of the vehicle.

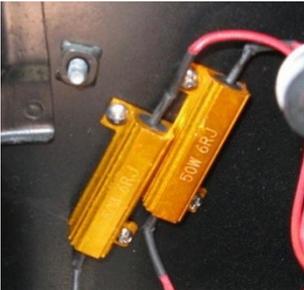

2. Screw the resistors on a clean grinded metal surface for heat dissipation. (When unscrewed, resistor temperature can rise 100 degrees celcius.)

3. Once the surface location is found, unscrew resistors and apply dielectrical grease between resistor and surface.



4. Screw the resistors back in place.
5. Plug the resistor on the LED bulb connector on each sides of the vehicle.

